BEFORE YOU COMMIT

HOW TO GET THE COLOR RIGHT

Sample, ground coat, blend

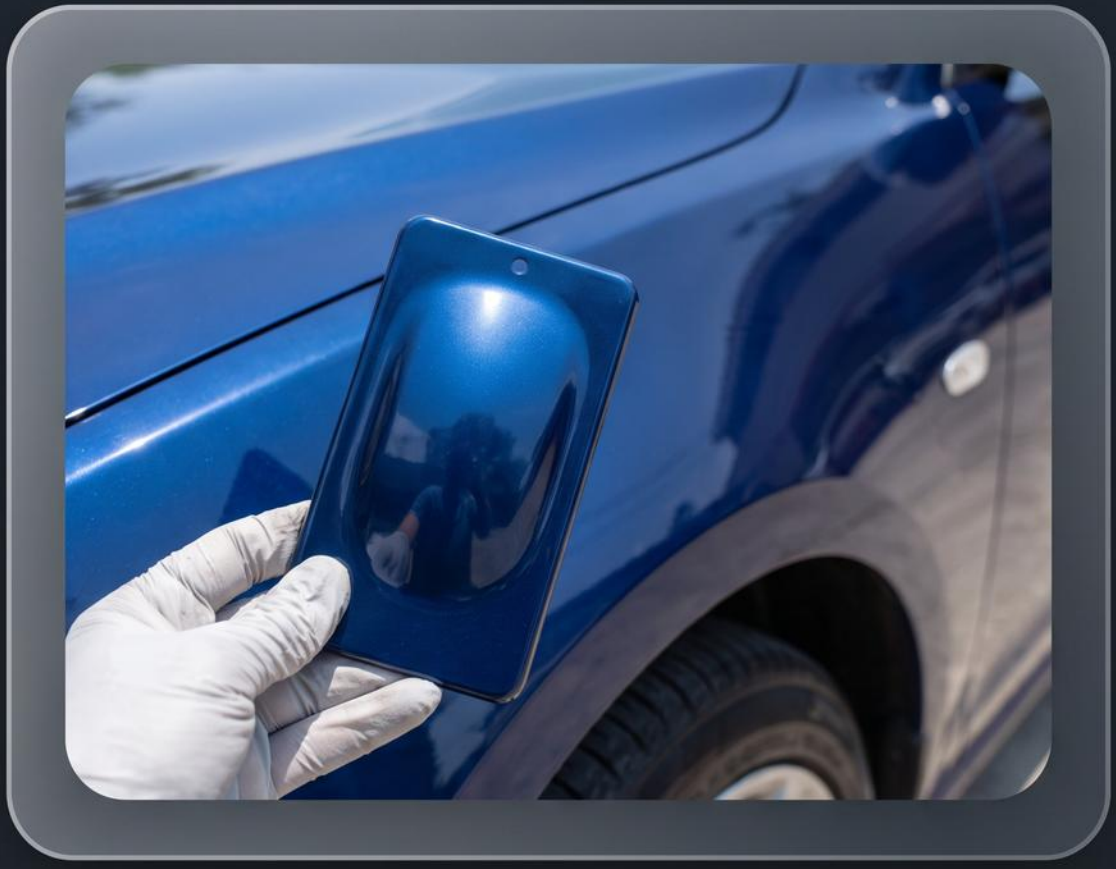

@thespraysource

CUSTOM COLOR? SEE IT FIRST

ORDER A PAINTED SAMPLE

Custom colors only. OEM codes are mixed to the factory formula

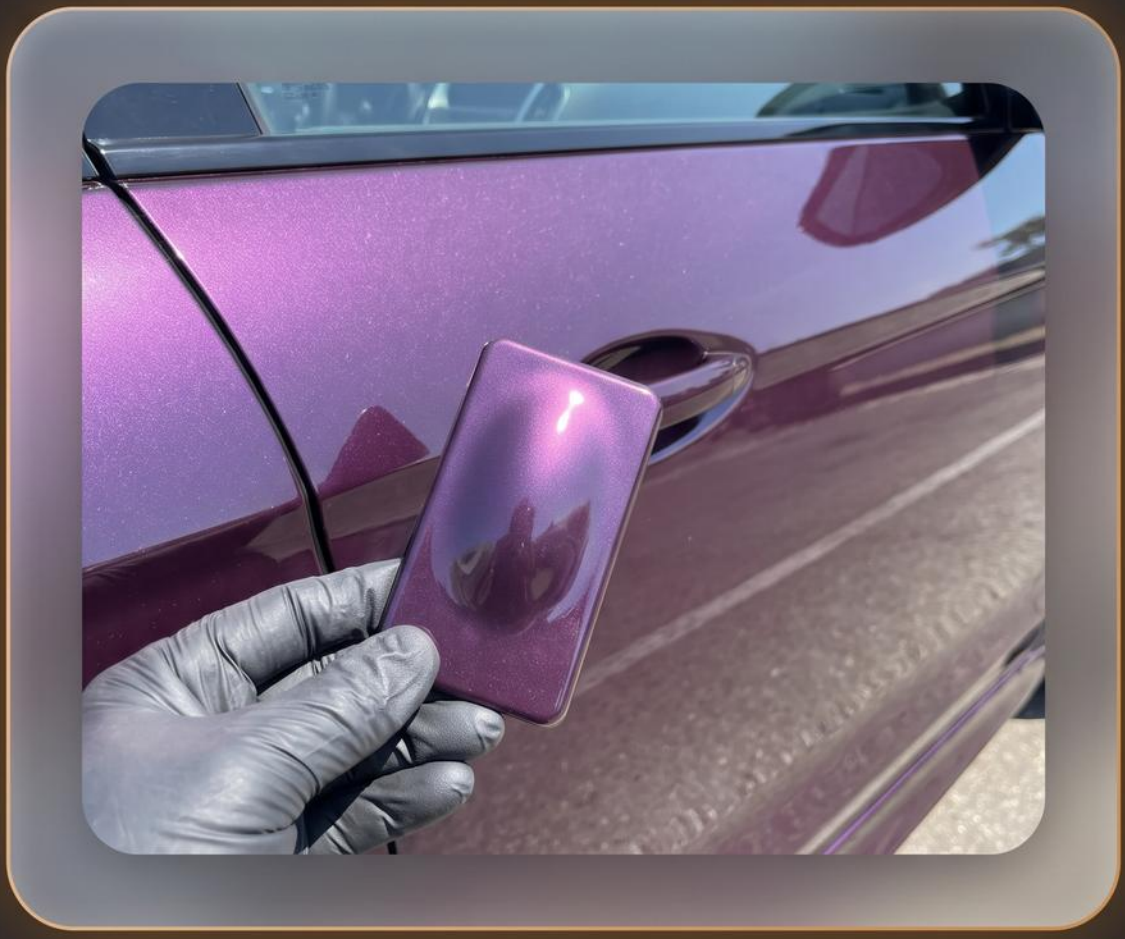

@thespraysource

YOUR CAR IS NOT FACTORY FRESH

PAINT AGES AND FADES

The code gives the original formula

@thespraysource

USE THE RIGHT GROUND COAT

GRAY AP-7541G SEALER UNDER OEMATCH

Spray cans: 1K epoxy, gray or black to suit

@thespraysource

ALWAYS PLAN TO BLEND

INTO AT LEAST ONE ADJACENT PANEL

No exceptions

@thespraysource

CLEAR THE WHOLE PANEL

A CLEAR EDGE ALWAYS SHOWS

Clear locks the blend in

@thespraysource

CUSTOM COLOR MATCHES

A CLOSE REPRESENTATION

Minimum 1 pint. Sample first, then blend

@thespraysource

READ THE FULL GUIDE

THESPRAYSOURCE.COM

/pages/paint-troubleshooting

@thespraysource