PAINT YOUR BIKE FRAME

WITH A SPRAY CAN KIT

Start to finish, one slide per step



@thespraysource

STRIP TO THE FRAME

WHEELS, DRIVETRAIN, CABLES OFF

Best results come from a bare frame and forks



@thespraysource

WASH WITH IRON-X SOAP

DRY, THEN WAX & GREASE REMOVER

Keep the remover off rubber and plastic parts



@thespraysource

SCUFF THE FRAME AND FORKS

GRAY SCUFF PAD UNTIL FLAT

No shiny spots. Rinse, dry with rag and compressed air



@thespraysource

MASK BEARING SEATS AND THREADS

NO TAPE BRIDGING

Final wipe with microfiber and remover



@thespraysource

1K EPOXY: 1 LIGHT, 5 MIN, 1 WET

THEN WAIT 1 HOUR

Dry to the touch, then wait 1 hour. No sanding inside 24 hours



@thespraysource

BASECOAT: 2 TO 4 COATS

10 MINUTES OR UNTIL MATTE

Clear once dry to the touch: 15 min in a booth, else 30 to 60 min



@thespraysource

2K CLEAR: 2 TO 3 WET COATS

RECOAT AT FINGERPRINT

Pull the ring and bar first. 24 hour pot life




@thespraysource

UNMASK AT 30 MINUTES

REASSEMBLE AFTER 8 HOURS

12 hours before polishing. Flip cans and clear the nozzle

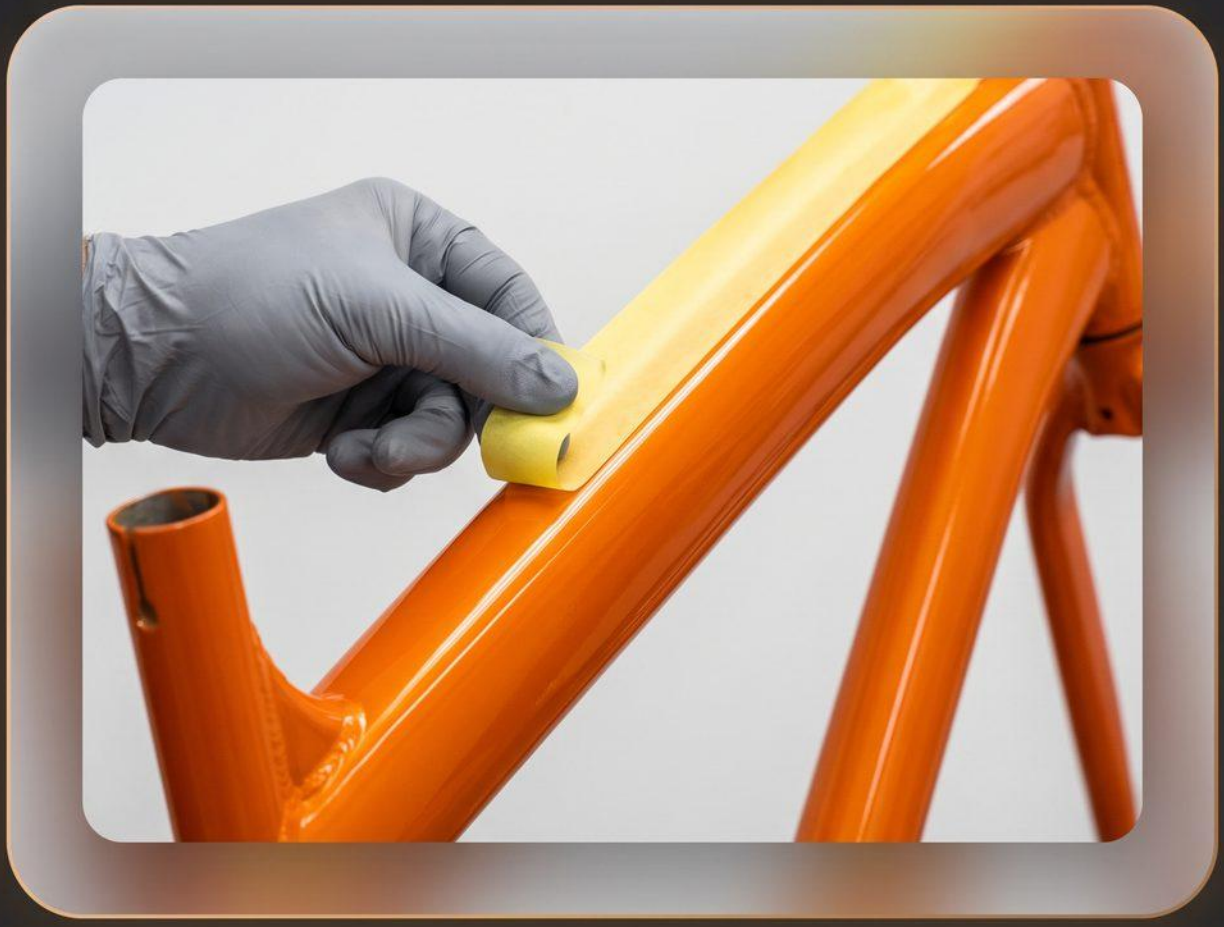

@thespraysource

READ THE FULL GUIDE

THESPRAYSOURCE.COM

/pages/bike-paint-kit-guide



@thespraysource