PAINT YOUR CALIPERS

ON THE CAR, WITH A SPRAY CAN KIT

Start to finish, one slide per step



@thespraysource

WASH OFF BRAKE DUST

WHEEL CLEANER + MITT

Dry, then wipe with isopropyl alcohol




@thespraysource

SCUFF FULLY

PITTED? HIGH BUILD FIRST

Sand it 320 to 400 before the epoxy

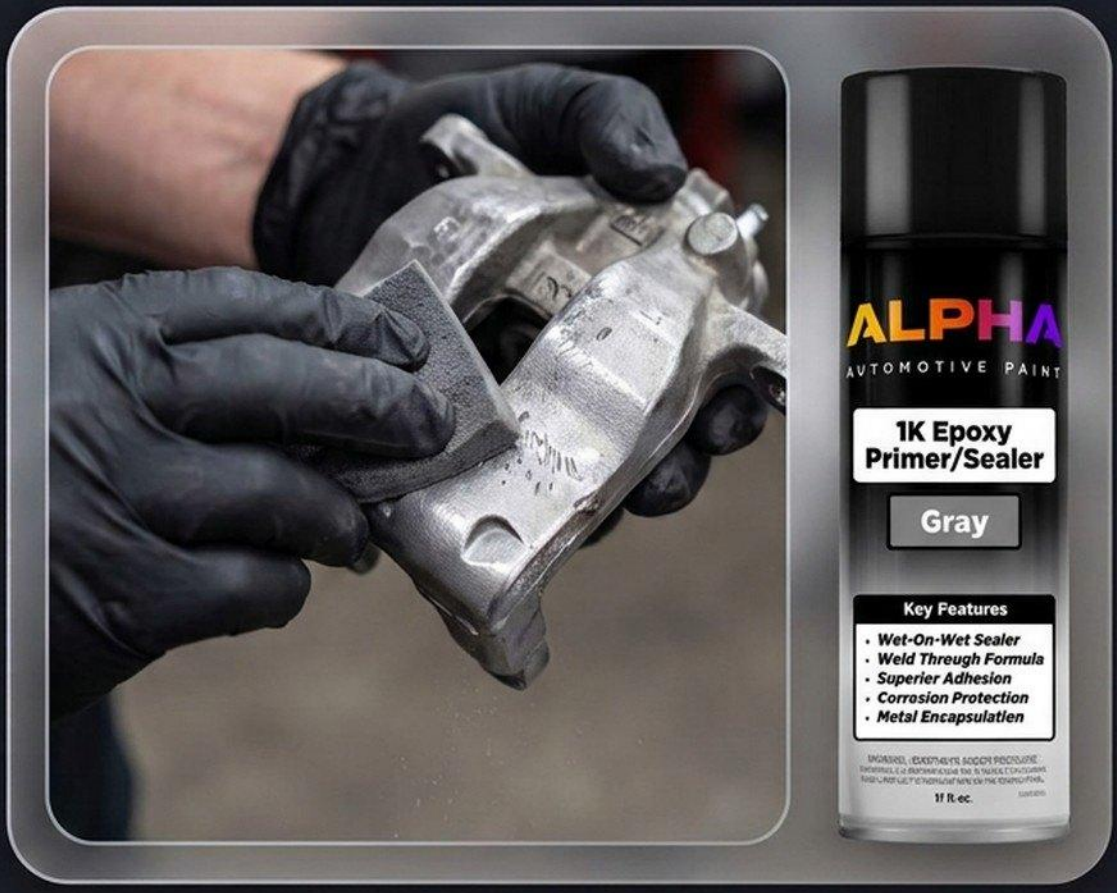

@thespraysource

MASK ROTORS, LINES, HARDWARE

DROP FILM + TAPE

No tape bridging. Final wipe



@thespraysource

1K EPOXY: 1 LIGHT, 5 MIN, 1 WET

THEN WAIT 1 HOUR

Dry to the touch, then wait 1 hour.
Shake 45 to 60 seconds



@thespraysource

BASECOAT: 2 TO 4 COATS

10 MINUTES OR UNTIL MATTE

Clear once dry to the touch: 15 min in a booth, else 30 to 60 min



@thespraysource

2K CLEAR: 2 TO 3 WET COATS

RECOAT AT FINGERPRINT

Pull the ring and bar first. 24 hour pot life



@thespraysource

UNMASK AT 30 MINUTES

WHEELS BACK ON AFTER 8 HOURS

12 hours before polishing



@thespraysource

READ THE FULL GUIDE

THESPRAYSOURCE.COM

/pages/caliper-paint-kit-guide



@thespraysource