SPRAY CAN TECHNIQUE

SPRAY GUN RESULTS. NO GUN.

Eight rules for every can in the kit



@thespraysource

SHAKE 45 TO 60 SECONDS

KEEP SHAKING BETWEEN COATS

Cold can? Warm it in warm water. Never heat it




@thespraysource

TEST SPRAY ON CARDBOARD

SPUTTERING? RESEAT THE CAP

Pull the cap off, reseat it, twist a full turn

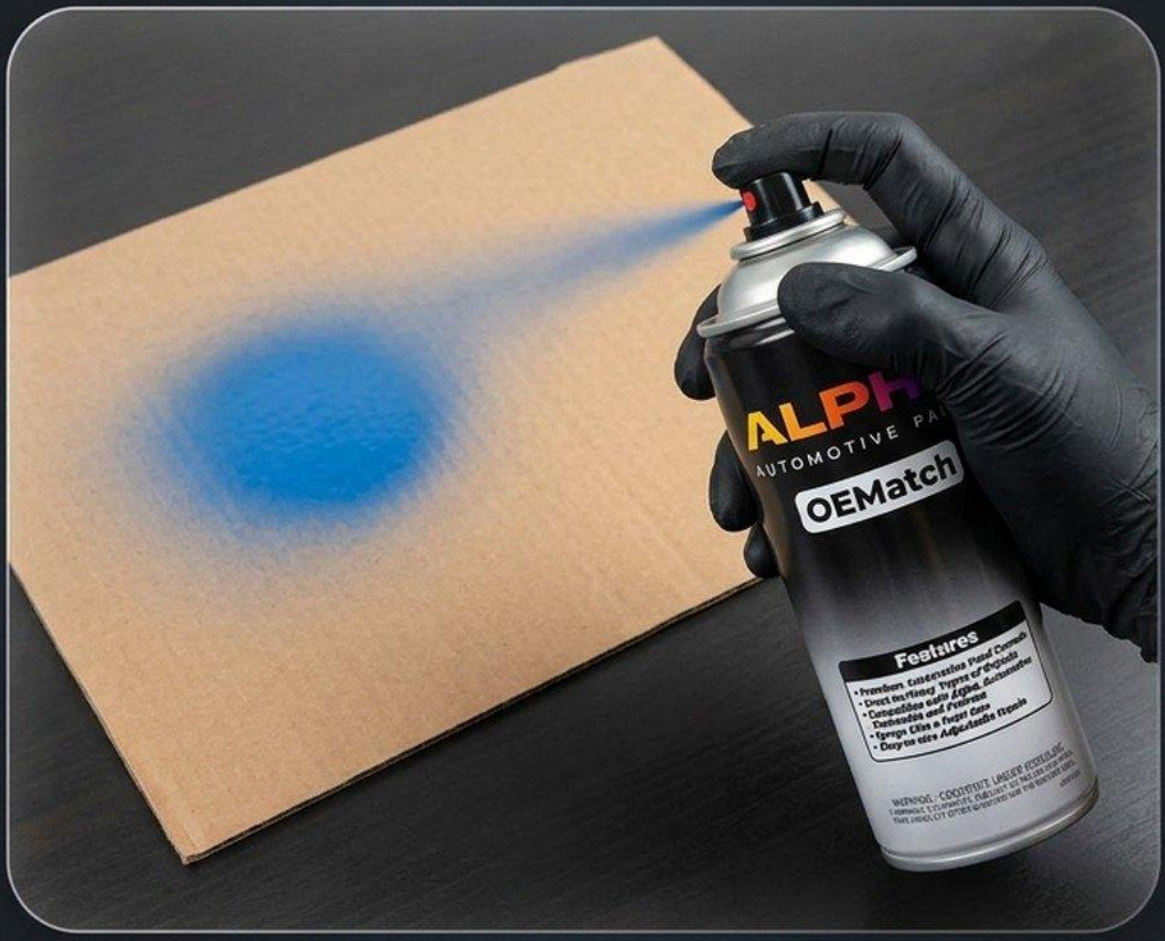

@thespraysource

HOLD 5 TO 6 INCHES AWAY

90 DEGREES TO THE PANEL

Steady passes, 50% overlap. Start and stop off the panel



@thespraysource

MEDIUM WET COATS

NEVER POOLING

Dry and rough? Too far or too fast.
Runs? Too close or too slow



@thespraysource

PRIMER: 1 LIGHT + 1 WET

5 MINUTES BETWEEN

Wait 1 hour after it is dry to the touch



@thespraysource

BASECOAT: 2 TO 4 COATS

10 MINUTES OR UNTIL MATTE

Metallics and pearls: finish with one light control coat




@thespraysource

2K CLEAR: 2 TO 3 WET COATS

RECOAT AT FINGERPRINT

About 10 minutes. Unmask after 30 minutes

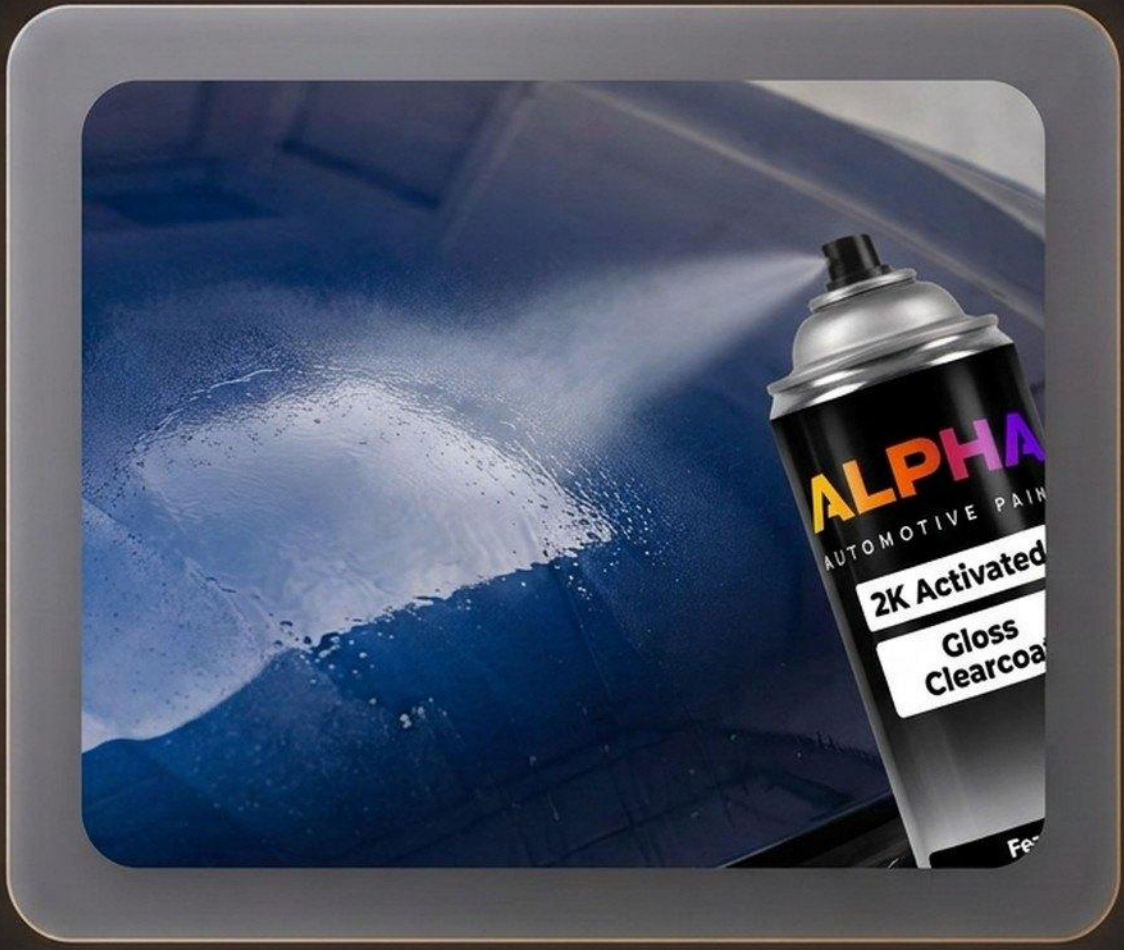

@thespraysource

CURE 8 HOURS

12 BEFORE POLISHING

Flip every can upside down and spray until clear



@thespraysource

READ THE FULL GUIDE

THESPRAYSOURCE.COM

/pages/spray-cans



@thespraysource